



Instruction manual



Pop speed oven SO 4

OBSAH

1. DECLARATION OF CONFORMITY	3
2. TECHNICAL DATA	3
3. LOCATION ELECTRIC	3
4. SAFETY MEASURES FOR FIRE PROTECTION	3
5. INSTALLATION	4
6. CONNECTING THE ELECTRICAL CABLE TO THE NETWORK	4
7. INSTRUCTIONS FOR USE	5
8. CLEANING AND MAINTENANCE	10
9. TROUBLESHOOTING	10

1. DECLARATION OF CONFORMITY

Decree of the Ministry of Health of the Czech Republic no. 38/2001 Coll. of 19 January 2001 Regulation (EC) No 1907/2006 - Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation of the European Parliament and Council Regulation (EC) no. 1935/2004 of 27 October 2004

The products meet the requirements of §26 of Act No.258/2000 as amended. The products meet the requirements of RoHS Directive 2015/863/EU, 10/2011, 517/2014, 2015/1094, 2015/1095.

Attention, the manufacturer gives up any responsibility in case of direct and indirect damage that is related to poor installation, incorrect intervention or adjustments, insufficient maintenance, incorrect use and which are eventually caused by other causes than the points referred to in the conditions of sale. This appliance is intended only for professional use and must be operated by qualified persons. Parts that have been secured by the manufacturer or authorized worker after the setting rebuild.

2. TECHNICAL DATA

Štítek s technickými údaji je umístěn na boku či zadním panelu přístroje. Před instalací si prostudujte schéma zapojení a všechny následující informace v příloženém návodu.

Net Width [mm]	Net Depth [mm]	Net Height [mm]	Net Weight [kg]	Power electric [kW]	Loading
431	510	510	45.00	3.300	230 V / 1N - 50 Hz

3. LOCATION ELECTRIC

For the correct operation and placement of the appliance, it is necessary to observe the following all prescribed standards for the given market. Unpack the device and check that the device has not been damaged during transport. Place the device on a horizontal surface (maximum unevenness up to 2°). Small unevenness can be leveled with adjustable feet. If the device will be placed in such a way that it will be in contact with the walls of the furniture, these must withstand a temperature of up to 60°C. Installation, adjustment, commissioning must be performed by a qualified person who is authorized to perform such operations, according to applicable standards. The device can be installed separately or in series with devices of our production. A minimum distance of 10 cm from flammable materials must be observed. In this case, it is necessary to secure the appropriate modifications to ensure the thermal insulation of the combustible parts. The appliance must only be installed on a non-flammable surface or against a non-flammable wall. **Parts of the appliance provided by the manufacturer. or his representative, the worker performing the installation may not rebuild the product.**

4. SAFETY MEASURES FOR FIRE PROTECTION

- the appliance may only be operated by adults
- the appliance may be used safely in accordance with applicable market standards:

Fire protection in spaces with special risk or danger

Protection against the effects of heat

- the appliance must be placed so that it stands or hangs firmly on a non-combustible surface

Objects of flammable substances must not be placed on the appliance at a distance less than a safe distance from it (the smallest distance between the appliance and flammable substances is 10 cm).

Table: degree of flammability of building materials included in st. flammability of substances and products

Degree of flammability	Building materials
A - non-flammable	granite, sandstone, concrete, brick, ceramic tiles, plaster
B - Not easily flammable	Acumin, Heraclitus, Lihnos, Itaver
C1 - highly flammable	wood, hardwood, plywood, hard paper, umakart
C2 - moderately flammable	chipboards, solodur, cork boards, rubber, flooring
C3 - Highly flammable	wood fiber boards, polystyrene, polyurethane, PVC

- information on the degree of flammability of common building materials is given in the table above. Appliances must be installed in a safe manner. During installation, the relevant design, safety and hygiene regulations must also be respected:
- fire safety of local appliances and heat sources
- fire protection in areas with special risk or danger
- protection against the effects of heat

5. INSTALLATION

Important: The manufacturer does not provide any warranty for defects arising as a result of incorrect use, failure to follow the instructions contained in the attached user manual and mishandling of appliances. Installation, modification and repair of appliances for large kitchens, as well as their dismantling due to possible damage to the gas supply, can only be carried out on the basis of a maintenance contract, this contract can be concluded with an authorized dealer, while technical regulations and standards and regulations must be observed regarding installation, electrical supply, gas connection and work safety. Technical instructions for installation and adjustment, for use by specialized technicians ONLY. The instructions that follow refer to a technician qualified for installation to carry out all operations in the most correct manner and according to the applicable standards. Any activity related to regulation etc. must only be performed with the device disconnected from the network. If it is necessary to keep the appliance under voltage, the utmost care must be taken. The type of appliance for extraction is declared on the nameplate, it is an A1 appliance.

6. CONNECTING THE ELECTRICAL CABLE TO THE NETWORK

Installation of the electrical supply - this supply must be separately secured. Ato with the corresponding circuit breaker of rated current depending on the power input of the installed device. Check the power consumption of the device on the production label on the back panel (or side) of the device. The connected ground wire must be longer than the other wires. Connect the device directly to the network, it is necessary to insert a switch between the device and the device with a minimum distance of 3 mm between the individual contacts, which corresponds to the applicable standards and load. The earth supply (yellow-green) must not be interrupted by this switch. Connect the device to the mains if the socket has adequate protection. In any case, the supply cable must be located so that it does not reach a temperature of 50 degrees higher than the environment at any point. Before the appliance is connected to the network, it is necessary to first make sure that:

- the supply circuit breaker and the internal distribution can withstand the current load of the appliance (see matrix label)
- the distribution board is equipped with effective grounding according to the standards of the relevant market and the conditions given by law
- the socket or switch in the supply is easily accessible from the appliance
- the electrical supply to the device must be made of oil-resistant material

We disclaim any responsibility in the event that these standards are not respected and in the event of a violation of the above principles. Before first use, you must clean the device, see chapter cleaning and maintenance. The appliance must be grounded using a screw with a grounding mark.

- Do not insert the plug of the power supply into the electrical outlet. sockets and do not pull out the zel. sockets with wet hands and pulling on the power cord!
- Do not use extension cords or multiple sockets.
- **The mains connection point must have a maximum of the following impedance: $Z_{MAX} = 0.042 + j 0.026 \Omega$ for the phase conductors and $0.028 + j 0.017 \Omega$ for the neutral conductor.**

DISTANCES TO BE COMPLIED WITH

Install the appliance:

- underneath a cooker hood of adequate power;
- so as to have access to the water and electrical connections;
- leaving a space of at least 5 cm at the back and sides of the appliance;
- at a distance of 50 cm to the side and 70 cm to the back from fryers or other hot equipment.

The equipment, both supported and wheeled, must be easily movable for any extraordinary maintenance. Make sure that any building work following installation (e.g. walls built, doors replaced with narrower models, renovation work) does not hinder movement.

The equipment, both supported and wheeled, is not suitable for recessed installation.


Power connection

The oven is equipped with an UNEL Schüko plug which must be connected to a single-phase 16 ampere socket.

The cable can only be fitted or replaced by a qualified and authorised technician with one which has the same characteristics and length.

The earth cable must always be yellow/green.

Every appliance must be included in an efficient equipotential system that complies with the regulations in force in the installation country.

Connect the equipotential cable to the terminal indicated with the  symbol.

7. INSTRUCTIONS FOR USE

How to access the oven and browse

Your easy-to-use appliance ensures excellent cooking results.



A switch under the door turns the display on and off and a touch screen allows for quick and user-friendly browsing.

Browse the panel through the touch screen. Make sure your hands are always clean and dry.

When switched on, the oven preheats automatically (fig. 1).

While the oven is heating, you can set the energy-saving mode by pressing the ECO MODE button.

Press the arrow icon (fig. 2) to return to preheating mode.

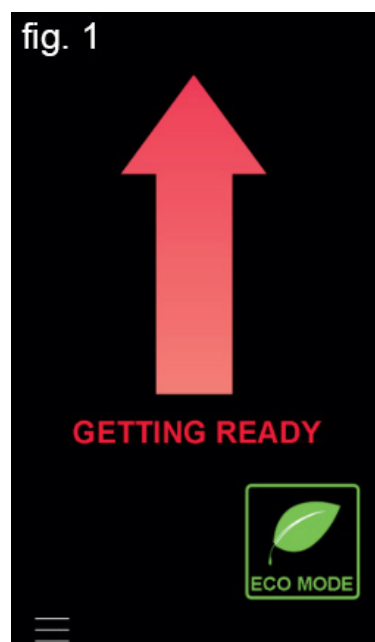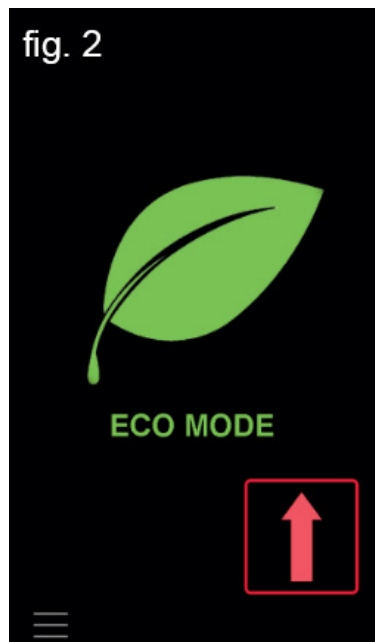


Water tank

The oven is equipped with a water tank for steam cooking (fig. 3).
The water level in the tank is indicated by an indicator on the oven's front panel.

To fill or top up the tank:

- lift the lid
- pour water
- close the lid

fig. 3

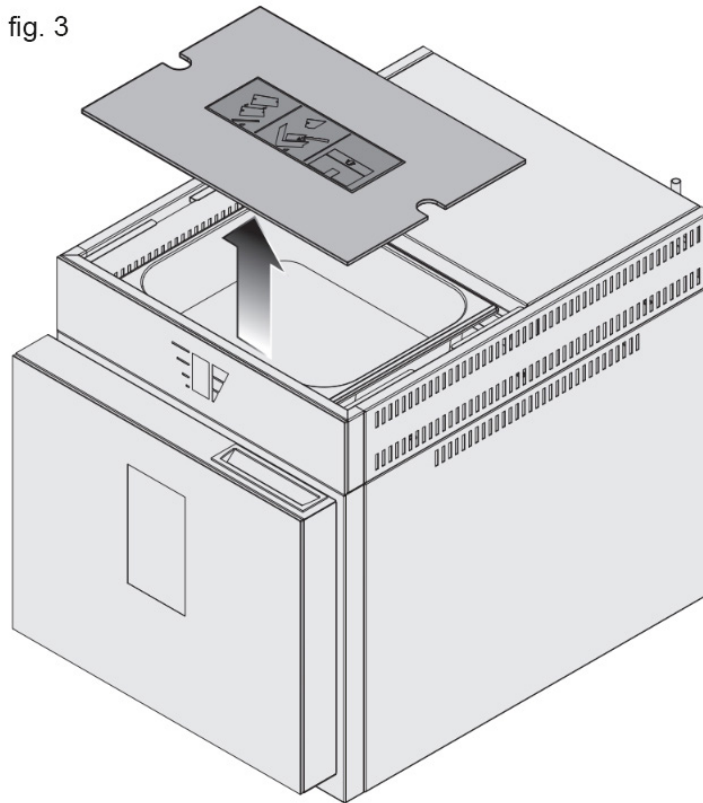

How to run a cooking cycle

Once preheating is complete, the screen shows six preset recipes (fig. 4).
You can save other recipes. To do so: press the empty box (fig. 5)

A summary screen appears (fig. 6)

From here, by pressing the button, you can:

- 1 - select an image from the library
- 2 - select internal doneness
- 3 - select the browning level
- 4 - set a cooking time (fig 7)
- 5 - start the cooking (fig. 8)
- 6 - save the recipe
- 7 - delete the recipe (hold for a few seconds)

Saved recipes can be edited.

To do so:

- press and hold the recipe icon to edit (fig. 9)
- edit the parameters you want to change

Once this is done, you can (fig. 10):

- save the changes by pressing button - 8
- start the cooking by pressing button - 9

Configurations

To access the configuration menu (fig. 11), tap button - 10

Select CONFIGURATION

From this menu (fig. 12), you can:

- set the date and time
- access system info
- adjust the display brightness
- adjust the buzzer volume

Import/export

YOU can import and export information, such as recipes and the alarm list.

To do so:

- insert the USB flash drive in the port at the front bottom
- touch button - 1
- select IMPORT or EXPORT



fig. 4

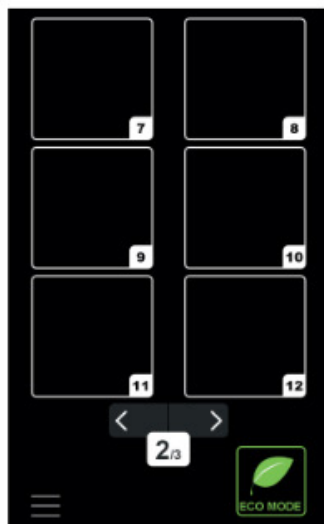


fig. 5

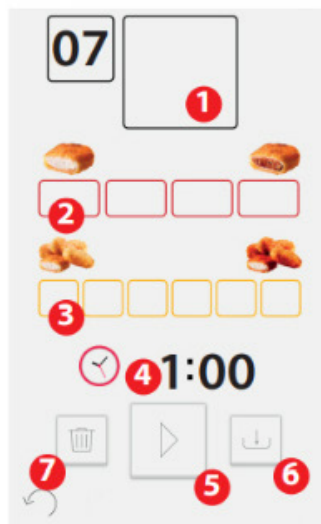


fig. 6

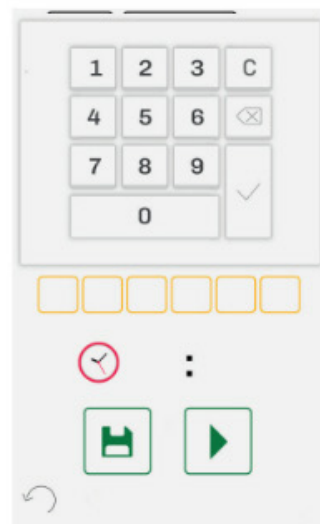


fig. 7

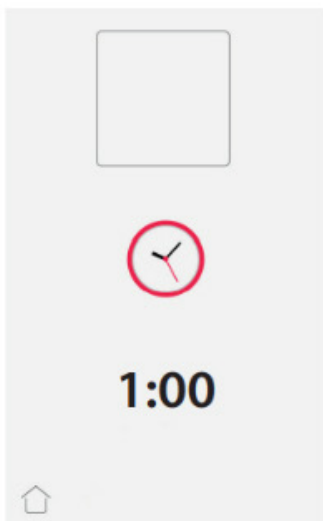


fig. 8



fig. 9

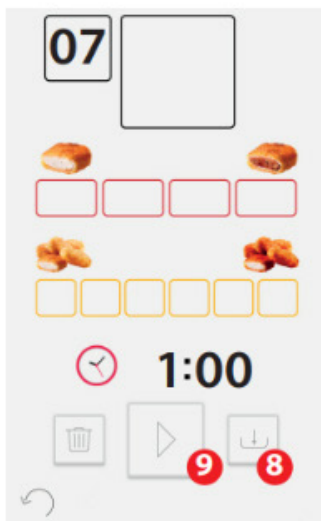


fig. 10



fig. 11

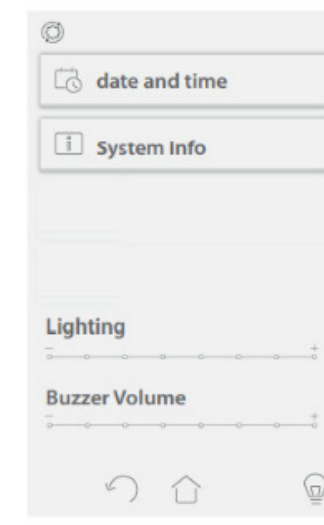


fig. 12

Cleaning external surfaces and glass surfaces

Wait for the appliance to cool off and use a cloth soaked in warm soapy water. Finish by rinsing and drying. Otherwise, you can use a soft cloth soaked in delicate products specific for steel or glass surfaces (depending on the surface to clean) and follow the instructions provided by the detergent manufacturer.

When you clean the oven, avoid infiltrations.

Cleaning the cooking chamber

Clean the cooking chamber at the end of every working day to maintain hygiene and performance levels high and keep the steel sparkling. You can wash the oven manually.

8. CLEANING AND MAINTENANCE

It is recommended to have the device checked with a specialist service at least once a year. All the interventions in the device can only be carried out by a qualified person who has the authorization to do so. **CAUTION!** The device must not be cleaned with direct or pressure water. Clean the equipment daily. Daily maintenance extends the life and efficiency of the equipment. Always turn off the main inlet to the device. Wash the stainless steel parts with a damp cloth with a detergent without coarse particles and wipe dry. Do not use abrasive or corrosive cleaning agents. Attention! Before using the device, it is necessary to remove the protective foil from the entire surface, and then wash it well with water with detergent, and then wipe it with a damp cloth. **ALERT!** The warranty does not apply to all consumables subject to normal wear (rubber seals, bulbs, glass and plastic parts, etc.). The warranty also does not apply to the device if the installation is not carried out in accordance with the instructions - an authorized worker according to the corresponding standards and if the equipment was unprofessionally manipulated (interventions in the internal equipment, etc.) or were operated by unhappy staff and contrary to the instructions for use, further The warranty does not apply to damage by natural effects or other external intervention. **Required service organization 2 times a year. After the lifetime, the shipping packaging and equipment are submitted to the collection, according to the regulations on waste management and hazardous waste.**

9. TROUBLESHOOTING

Alarm	DESCRIPTION	ACTION	SOLUTIONS
E01	Cooking chamber temperature detection probe failure	Cooking stopped.	Contact the technical support service or your local retailer.
E05	Oven motor thermal safety alarm	Cooking stopped. Automatic reset.	Contact the technical support service or your local retailer.
E06	Oven cooking chamber overtemperature thermal safety alarm	Cooking stopped. Manual reset by authorised technician.	Contact the technical support service or your local retailer.
E15	Oven board overtemperature alarm	Cooking stopped.	Clean the technical compartment instrument panel filter. Do not disconnect the oven's external power supply. If the problem persists, contact the technical support service or your local retailer.
E16	Serial communication problems between the touch board and the base board	Cooking stopped.	Switch the appliance off and on again. If the problem persists, contact the technical support service or your local retailer.
E14	Oven board overtemperature pre-alarm	Cooking stopped. Manual reset.	Clean the technical compartment instrument panel filter. Do not disconnect the oven's external power supply. If the problem persists, contact the technical support service or your local retailer.

E22	No external power supply	Cooking stopped. Manual reset.	Press the knob to reset the alarm. Check if a power outage occurred. If the problem persists: Contact the technical support service or your local retailer.
-----	--------------------------	--------------------------------	---